


RedStone optional trim installation instructions

Removing the RedStone trim

1


Step 1 - From the rear of the fireplace, remove four phillips head screws from four corners.

For ease of install, lay fireplace face down on a cloth (soft) surface, when installing trim pieces.

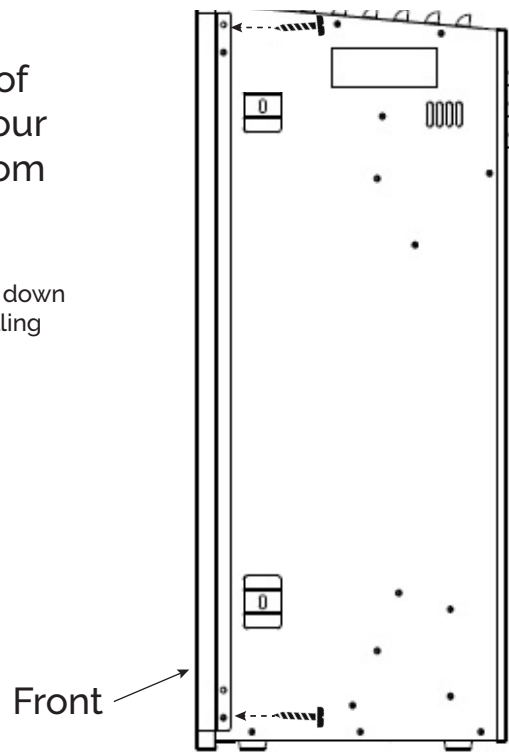

2

Step 2 - Remove screws from perimeter using a P2 phillips head screwdriver. (Save for reuse)

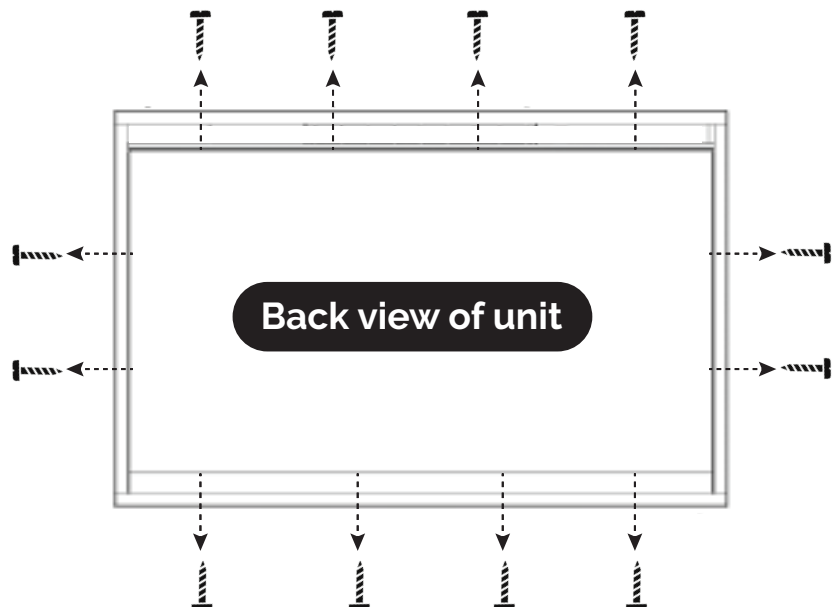


Installing the RedStone optional trim


3 Step 3 - Install both side trim pieces first using screws from step 1.

4 Step 4 - Once sides are installed, install top and bottom trim.

5 Step 5 - Install Trim to Trim screws (8 screws total).

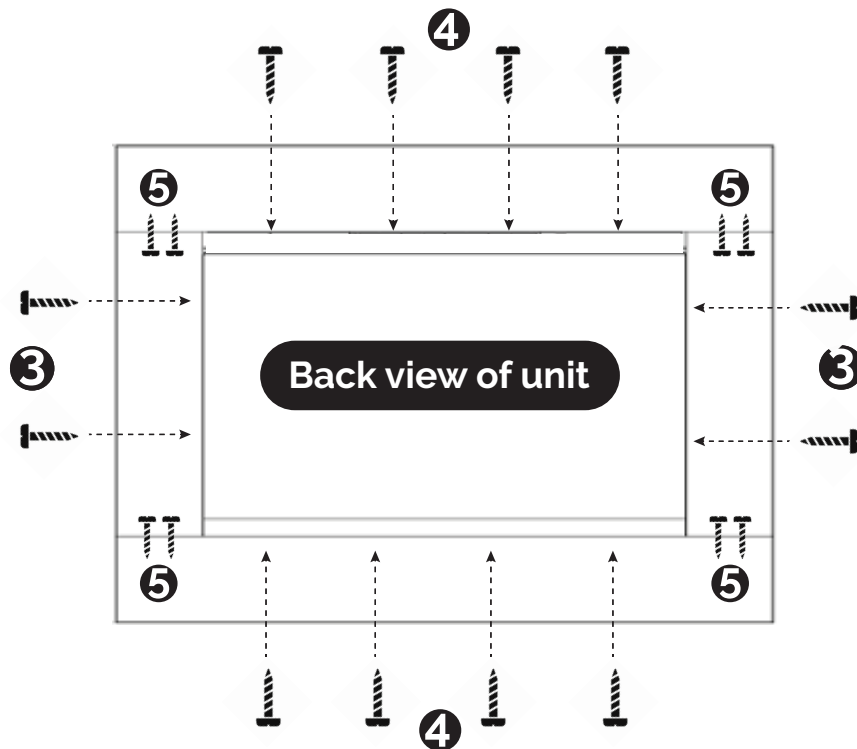

For ease of install, lay fireplace face down on a cloth (soft) surface, when installing trim pieces.

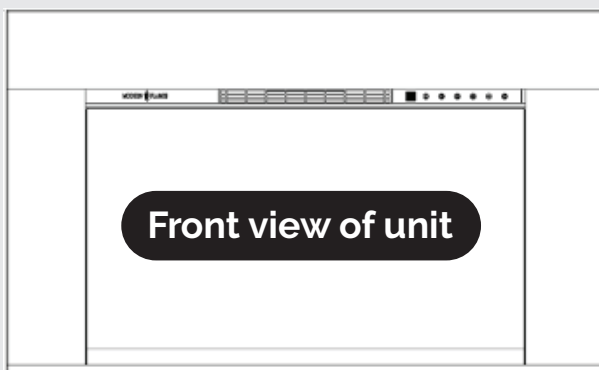

If thin trim on bottom is desired, attach as noted

